



Mixels

41556

 
TIKETZ



 LEGO.com

6150688


1

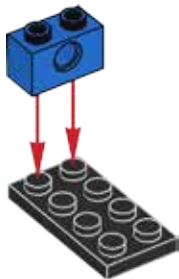

2



 
3

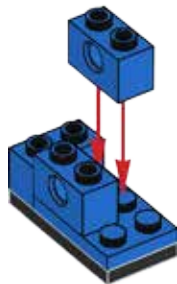



4



 
5

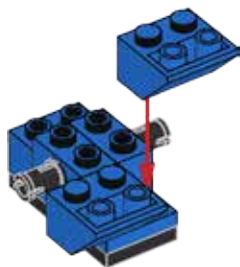


6

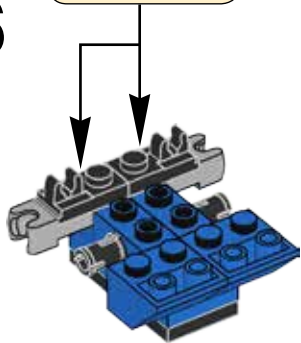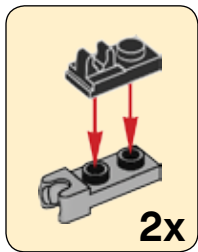  


7

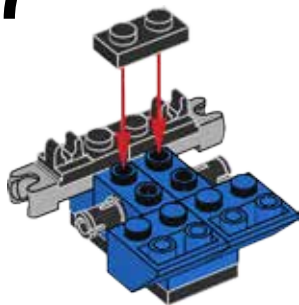 


8

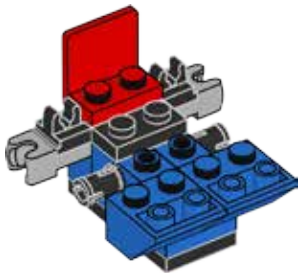 


9

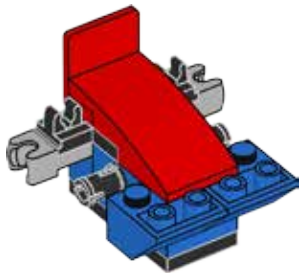 

10

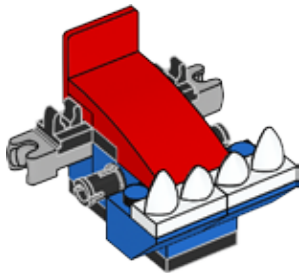 

11

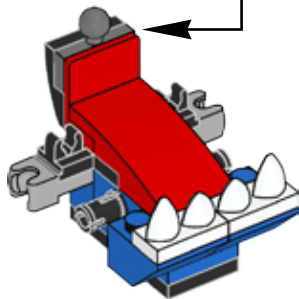 



12



13



14



 
15




16




17

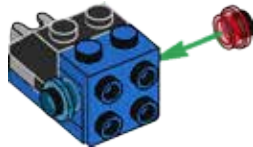

18

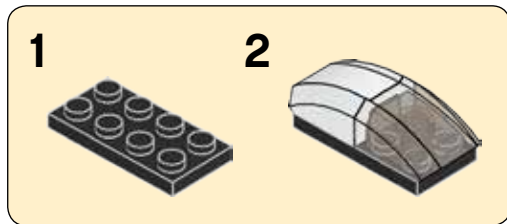 


19

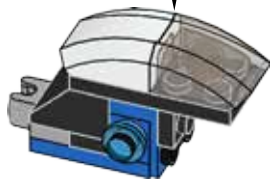 


20



 21

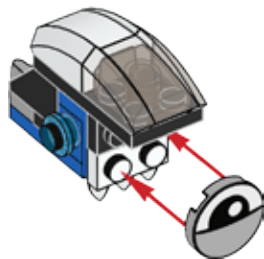

22

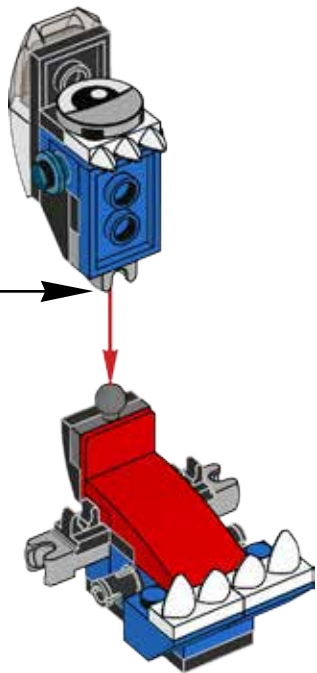 





23



 24

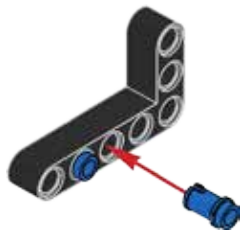

25

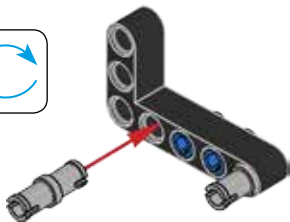 


1





2



 
26

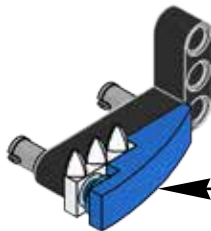

27

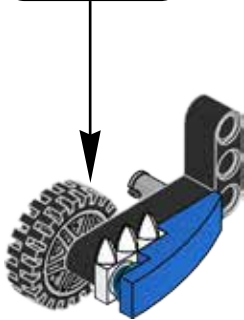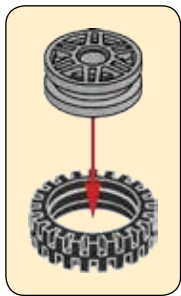  

28

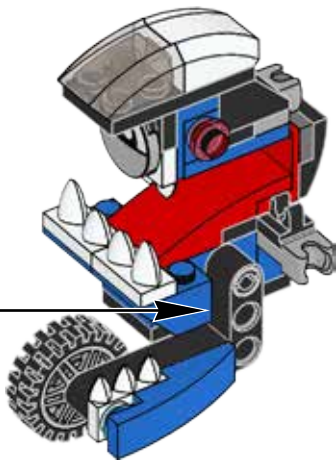 





29



 
30

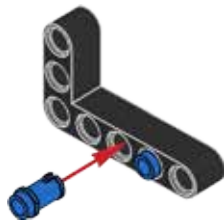

31

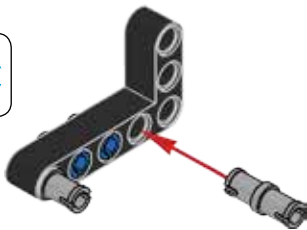 


1

 



2



 
32

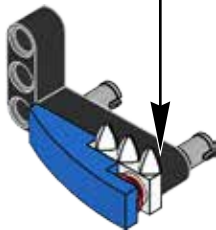


33

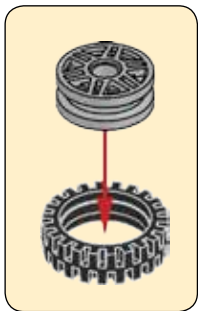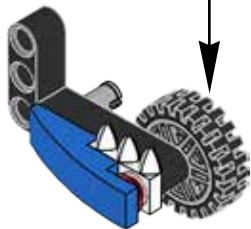  


34

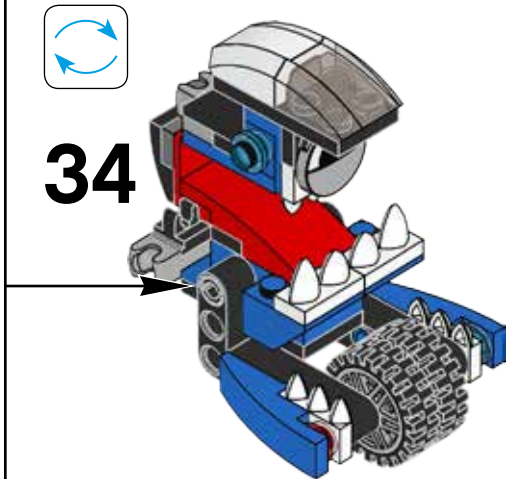 

1

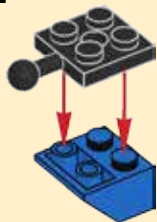 


2

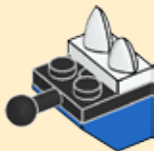 

2x

 35

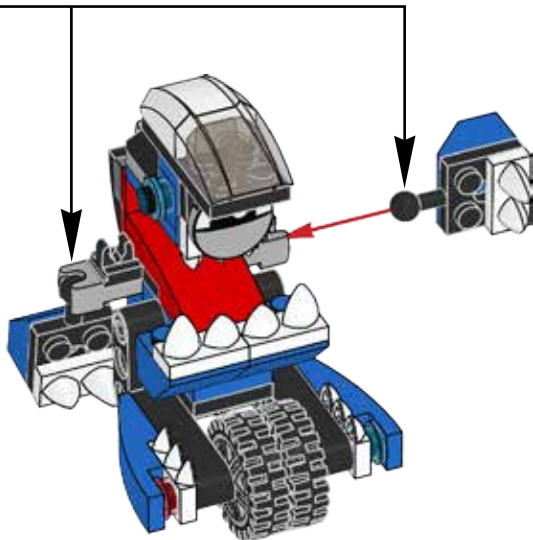

36





4x
6046384



1x
6001806



3x
370023



2x
6045938



1x
6053077



1x
6134611



3x
6046381



1x
4613174



1x
6117968



1x
6039479



1x
303926



1x
6100970



1x
4195869



4x
4143005



4x
366023



2x
4121715



2x
6051038



4x
4211807



1x
4217722



2x
4583862



2x
302123



2x
4598528



2x
302026



1x
6043656



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



00800 5346 5555 :



1-800-422-5346 :



3x
302326



2x
4142823



2x
6044729



2x
4541455



2x
3005741



2x
6043639



2x
3005743



**KUFFS
41554**



 
 
**BUSTO
41555**



**TIKETZ
41556**



**MCPD
MAX!**

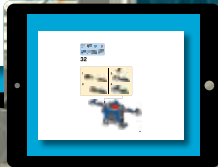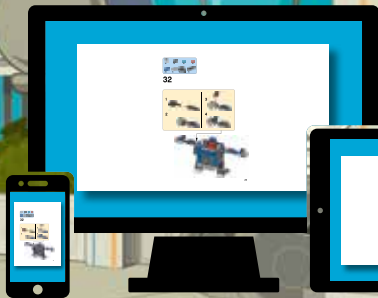

LEGO.com/mixels



SERIES
7

WELCOME TO
MIXOPOLIS



PALADUM
41559



CAMILLOT
41557



JAMZY
41560



KUFFS
41554



TRUMPSY
41562



TAPSY
41561



MIXADEL
41558



TIKETZ
41556



LEGO.com/mixels





club™



1

LEGO.com/club



2

3

