






























2x

 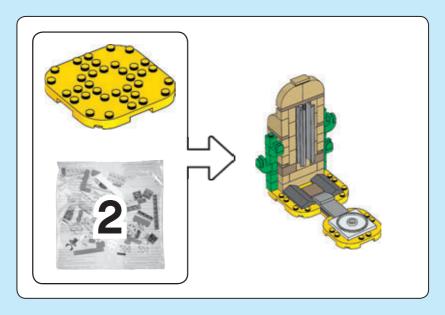





 


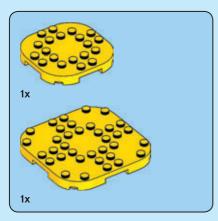


 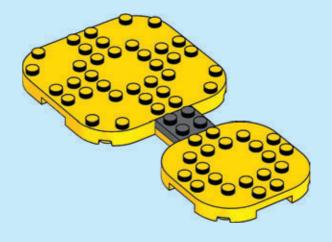





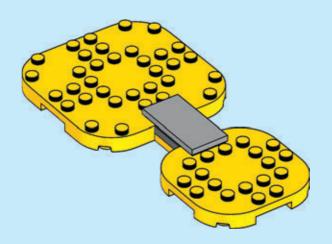




 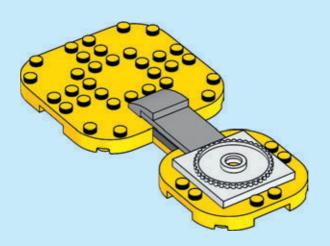





 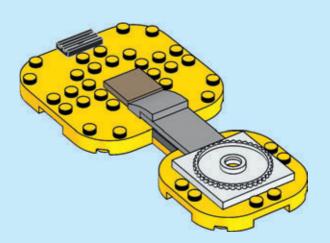





 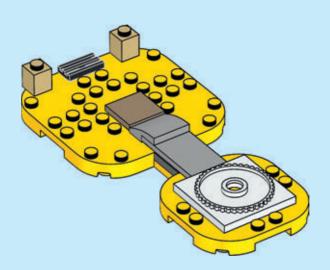





 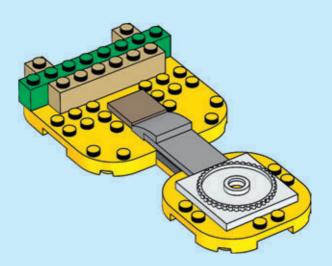





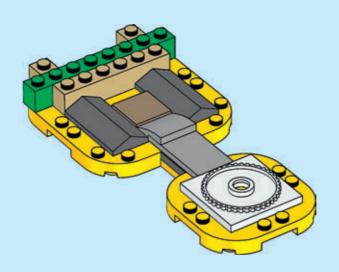




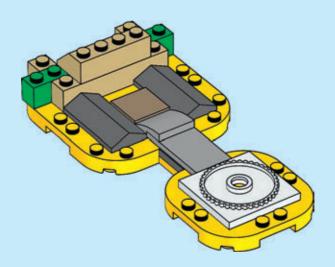




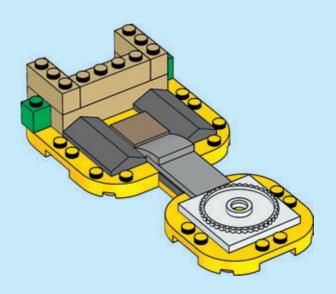




 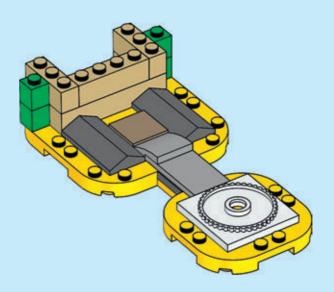





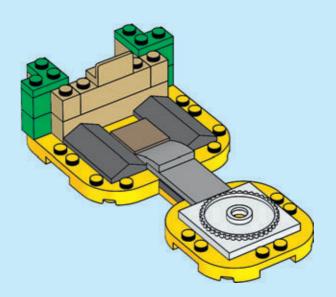




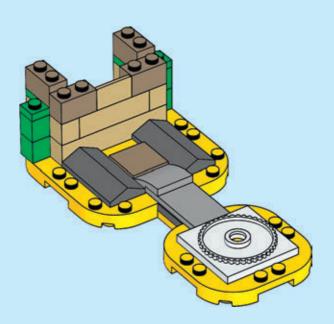




 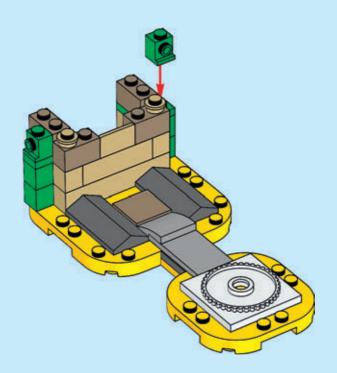





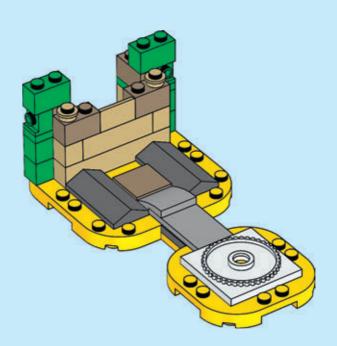




 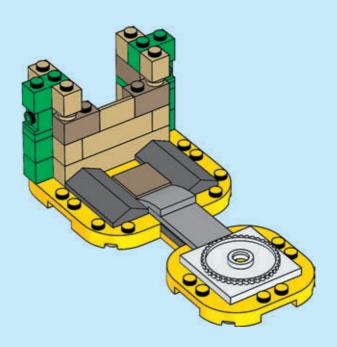





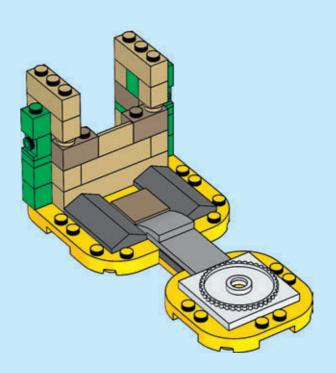




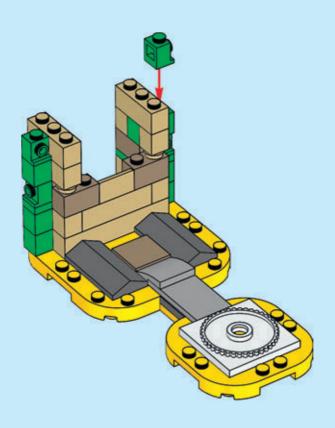




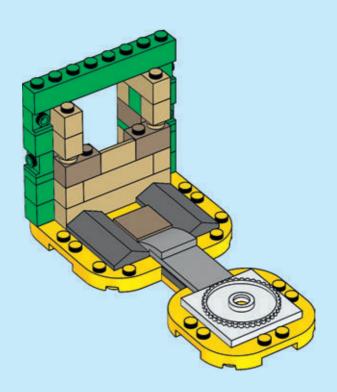




 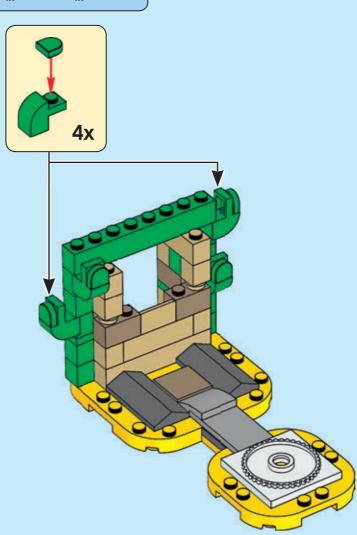





 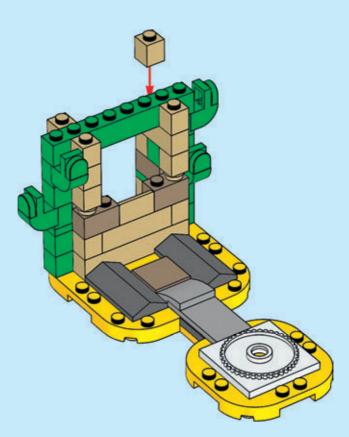





 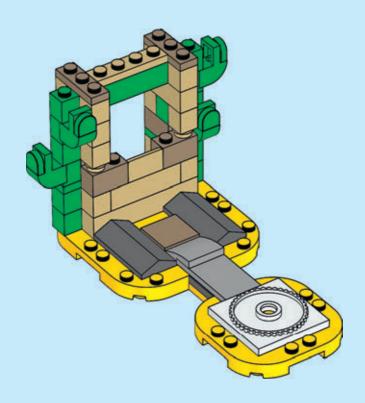





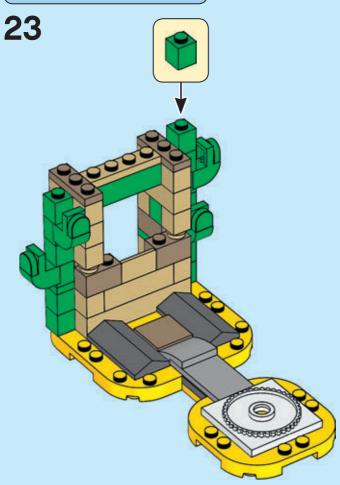





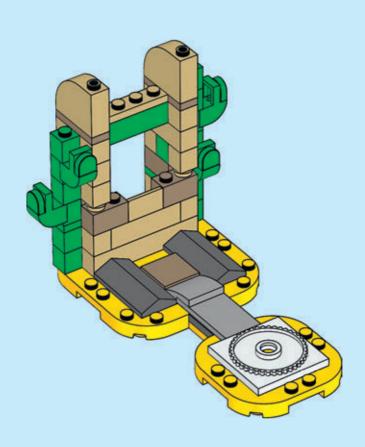




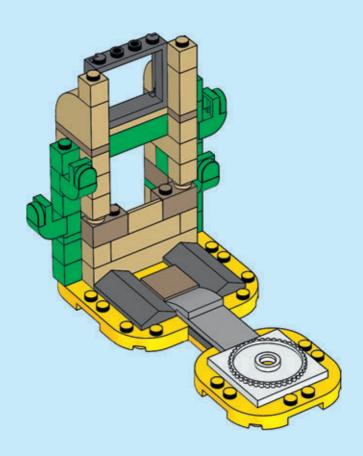

 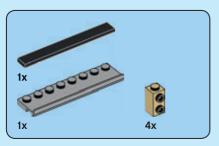


 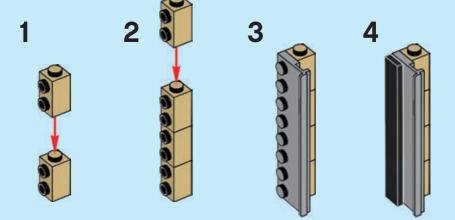


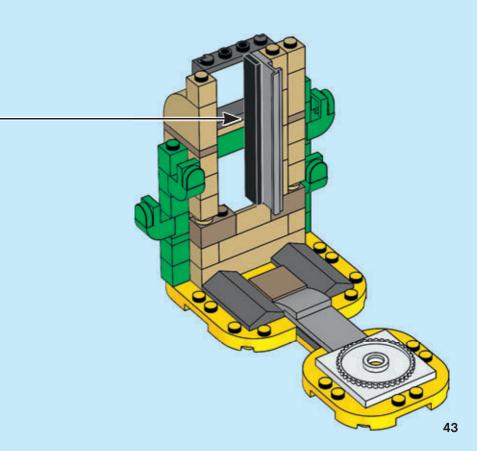

 


 


 


 




 





 





 





 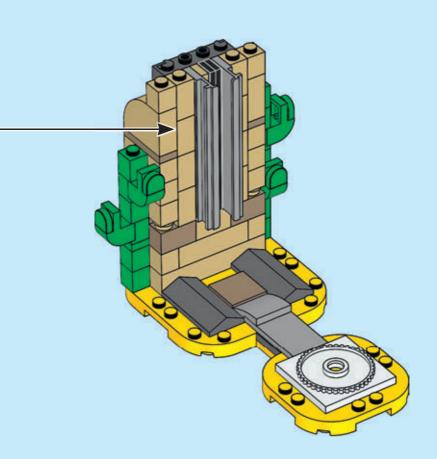





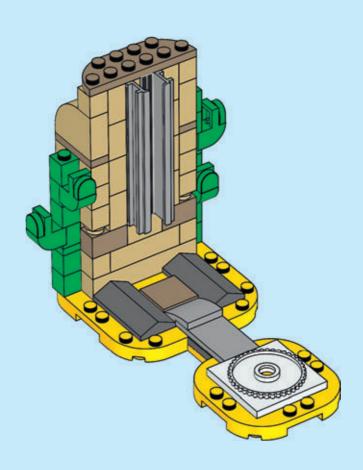




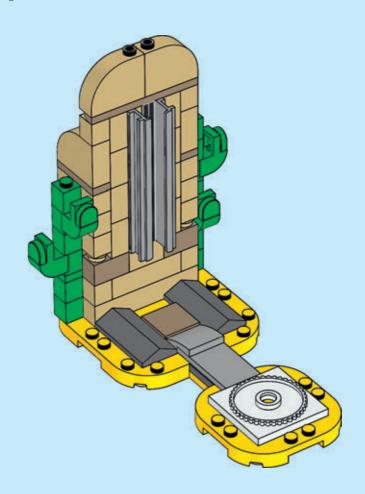



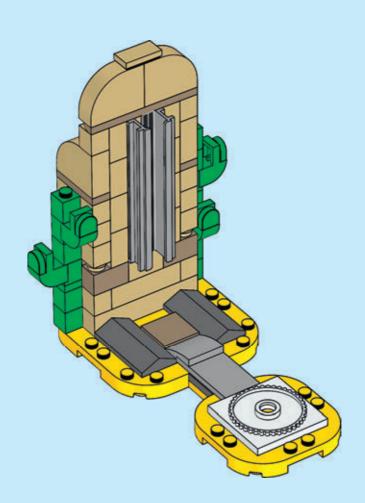

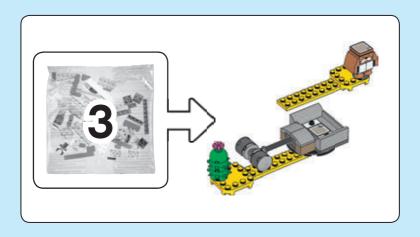





 




 




 




 




 


















 






 


 

















 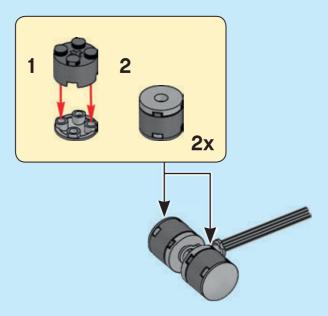




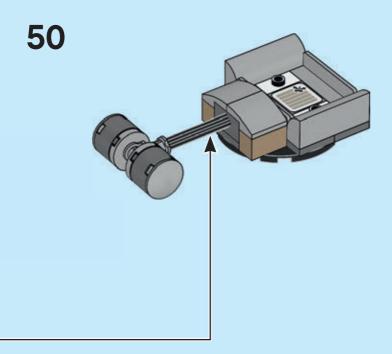


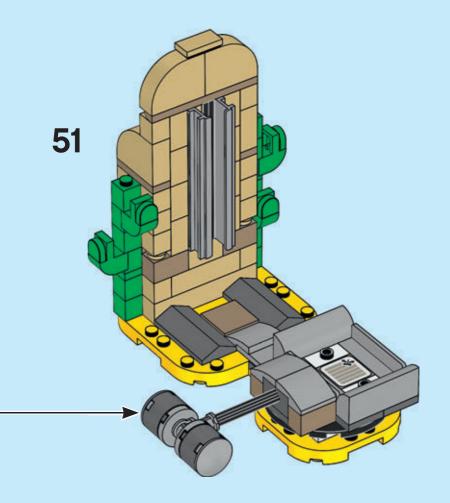









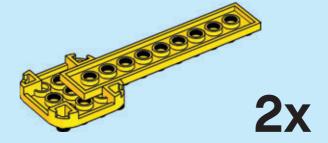

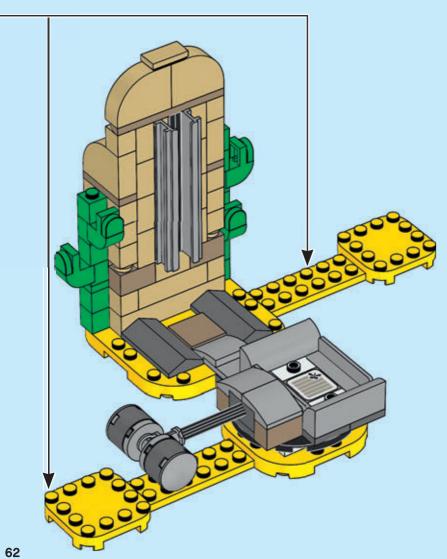



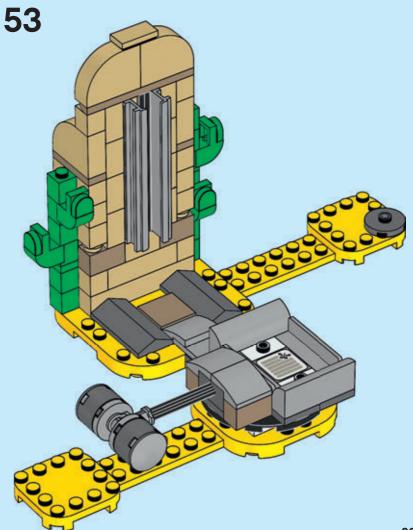





 


















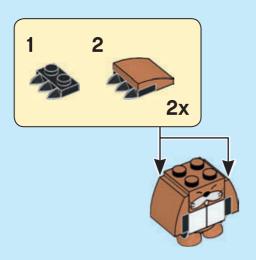







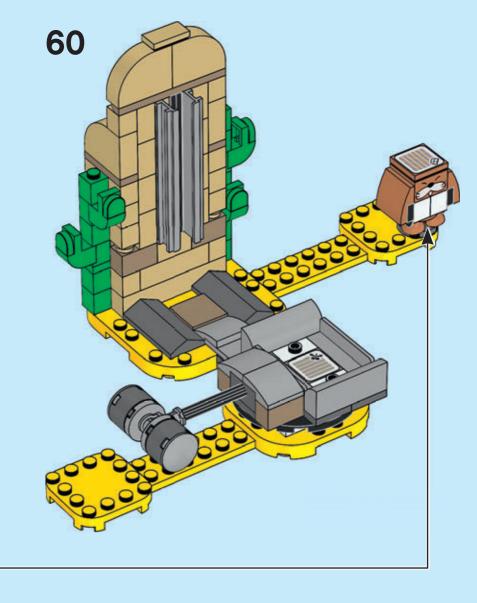







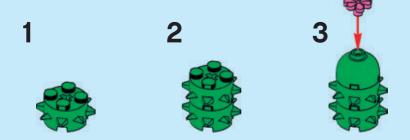

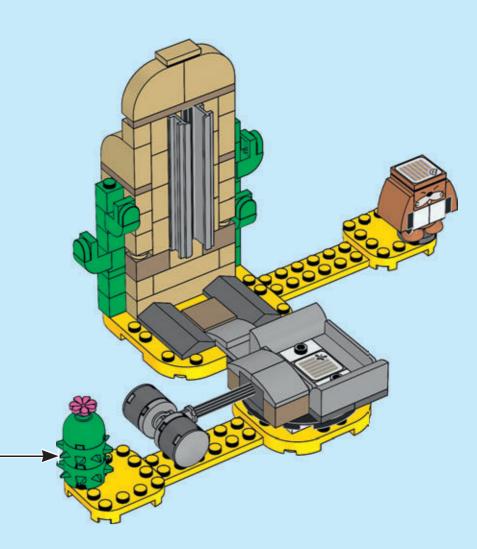

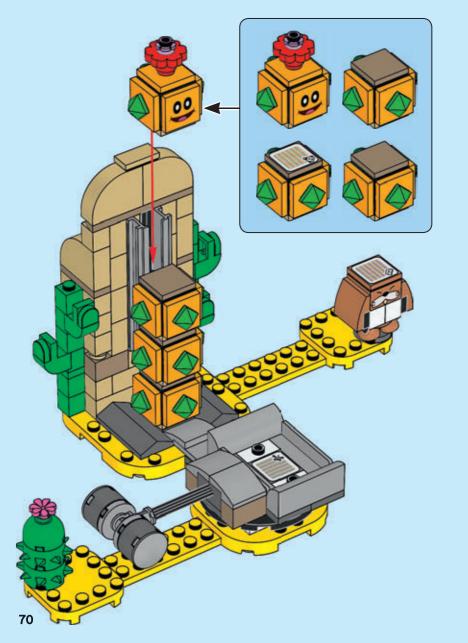

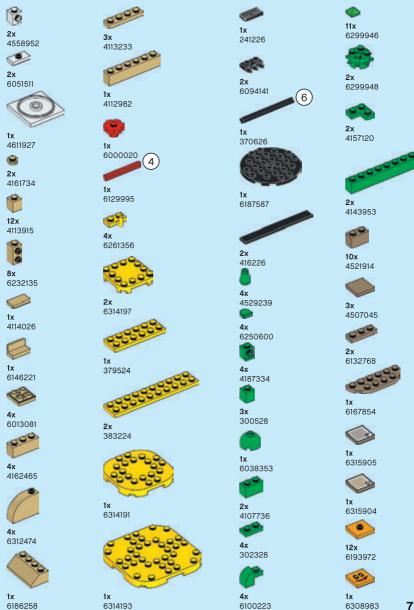









Зх



2x





1x



2x















2x



2x











1x



1x







Customer Service

Kundenservice

Service Consommateurs Servicio Al Consumidor

LEGO.com/service or dial



1-800-422-5346:











